
METACEL

USER MANUAL MC-15C2

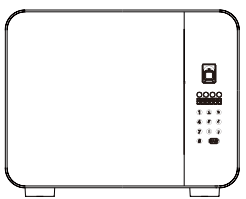

MC-15C2

KOREA CERTIFICATION KOREA STANDARD SWEDEN ISO9001 ISO14001

Safety Precautions



- Finger or objects may get stuck when opening and closing door.
- Keep away from children
- Do not hit edge of safe to avoid injury.



- Be careful when moving or installing safe to avoid any injury
- Firmly fix safe to ground when installing. When moving safe, inquire a professional if needed.
- Improper handling of safe can cause damage to floor or table.




- Avoid placing fragile objects, such as ceramic or glass, on safe. They may fall and cause injury.



- Place safe on dry flat surface. Safe door may not close.


ver.202309

Safe overview

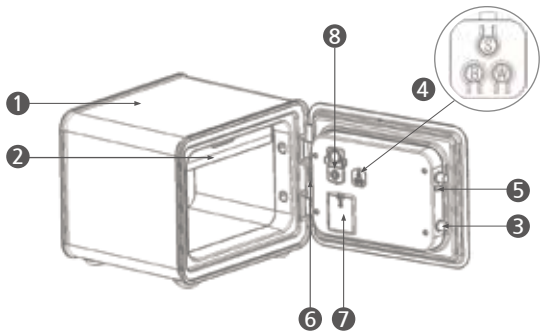

01 Main body
02 Tray
03 Lock Bolt
04 "S" Memory Button
"B"(Not in use)
"W"(Not in use)
05 Door sensor
06 LED Light
07 Battery case
08 Alarm

Keypad Overview

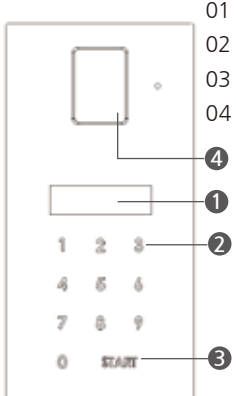

01 LCD Display
02 Touch Keypad
03 Touch START Button
04 Fingerprint lock



ANCHOR KIT



MECHANICAL OVERRIDE KEYS



ALARM



BATTERIES



USB C POWER SUPPLY

OPEN

Press STRAT → Enter passcode (initial code:123456) → Press STRAT → Pull the door

PASSCODE CHANGE

[2 User mode]


Open the door → Press "S" button on the backside of the door → "CodE" will be displayed. And then 'USEr_' will be displayed → User 1 A / User 2 B

A : User 1

Press '1', then press START button → Enter new passcode (4~20digit). Then press START button → "AgAin", then '_____' will be displayed → Enter new passcode again, then press START button. → "USEr_1" will be displayed. New passcode was set

B : User 2

Press '2', then press START button → Enter new passcode (4~20digit). Then press START button → "AgAin", then '_____' will be displayed → Enter new passcode again, then press START button. → "USEr_2" will be displayed. New passcode was set

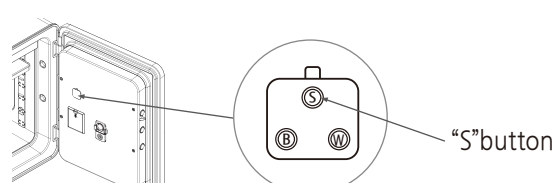

REGISTER FINGERPRINT

Open the door → Press 'S' button on the backside of the door for 3 seconds → 'SEt' will be displayed → Press 'S' button again shortly → 'FIngEr' will be displayed → Press '0' to register fingerprint → Scan fingerprint 2 times

(Maximum 10 fingerprint registerable)

DELETE FINGERPRINT

Open the door → Press 'S' button on the backside of the door for 3 seconds → 'SEt' will be displayed → Press 'S' button once again shortly → 'FIngEr' will be displayed → Press '1' to delete fingerprint → Enter ID number of fingerprint to delete

(Press "S" button to delete all fingerprint at once)

REPLACING BATTERIES

Replace batteries immediately when


- screen displays "Lo_bAt."
- safe door fails to open when "OPEn" message appears after passcode is entered.
- "good" appears on display along with "beep beep" sound after passcode is entered.
- screen fails to turn on after you press START button.
- touch button is not clear enough
- there is no response or malfunction

⚠ Attention

- After battery replacement, confirm safe is properly working before closing door.
- Use 1.5V alkaline batteries(AA X**4**).
- Proper insertion of the batteries is confirmed once screen displays "good"message and beep is heard.

MICRO USB 'C' TYPE PORT


In case the internal batteries are used up, Micro USB C Type port can be used to open the door

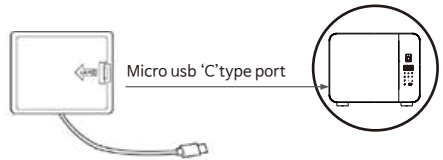

HOW TO USE ALARM

1. Use the "ON/OFF" switch on the Alarm to control the Alarm.
2. Use 3 x 1.5V AAA batteries.

-When there is external impact or the safe is tilted, the alarm fires (120dB sound)
-After 10 seconds from turning on the switch, Alarm is ready to operate.
-There is light detecting sensor with the alarm, so it will be off when the door is open.

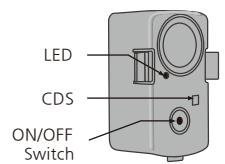

KEYPAD LOCK MODE

1. Activate

Press START for more than 10 seconds untill "Act" appears.
"Act" message signifies activation of keypad lock mode.
Any keypad input will only display "ACT"



2. Deactivate

To deactivate keypad lock mode, press START
for more than 3 seconds untill "dEAct" appears.



SECURITY MODE

Press START button twice to hide passcode display.
To disable the function , press START button twice again



[Passcode displayed]



[Passcode not displayed]

VOLUME CONTROL

Open the door → Press “S” button on the backside of the door for 3 seconds → “SEt” will be displayed → Press “S” button again twice shortly → “VoL” will be displayed → Press “0” ~“7” to choose volume → Press STRAT



[Volume displayed]

Emergency Key Instruction Manual

* Note


1.The emergency key is used to temporarily open the safe door in case the safe is inoperable. It is recommended not to use the master key in general usage of safe.

2.The emergency key is a security device that can open the safe without entering a registered passcode. It is notified that the customer is responsible for the loss or theft of the emergency key.(For security reasons, the master key number is not given, and additional purchases of it is not possible if lost.)


IMPORTANT	Please don't put the emergency keys in the safe, but keep the keys in other secure place

How to open the safe with Emergency key


1) To put suction cup on the top left of the front pattern.
2) Take off the front pattern by pulling the suction cup.

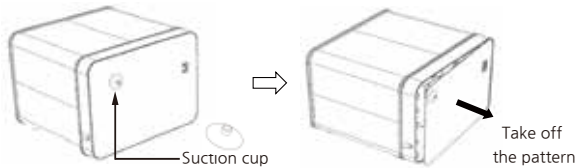

3) Insert the emergency key into the emergency key hole.

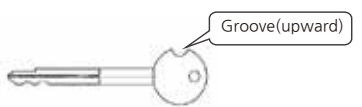

-. Place the emergency key groove direction upward and insert it all the way into the hole.
-. Pay attention to the direction of the groove and check if it is completely inserted.

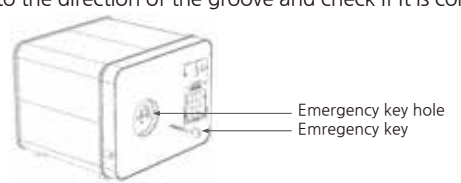

4) Unlock the emergency key by rotating it 120 degrees clockwise.
-. If the emergency key groove direction is 120 degrees downward, the door can be unlocked.



(Caution: When rotating the emergency key, do not forcefully turn it, please turn it slowly.)
(Caution: There is a risk of damage if the emergency key is turned excessively.)

How to open the safe with Emergency key

5) Open the door

-. Open the door and take out all the batteries more than 10 seconds
(Caution: If batteries are not taken out, error-05 will be displayed)

-. Rotate the emergency key 120 degrees counterclockwise.

-. Remove the emergency key


6) To put the front pattern again as follows.

-. This process should be done while all the batteries were taken out.

-. Place the front pattern to the right side edge of the door cover.

-. Insert the hook on the right side edge of the pattern to the door cover groove

-. Slowly fit entire pattern onto the door cover.

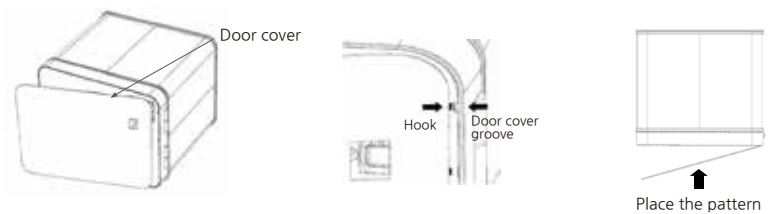

(Caution: If place pattern without removing batteries, touch error may occur.)
(Caution: If touch error occurs, remove all batteries, wait 10seconds, and then insert batteries again.)

7) To put batteries again to reboot the safe

-. Register new passcode

-. Regiseter fingerprint. (Maximum 10 fingerprints.)

(If register the same fingerprints several times, it will help to maximize the recognition rate of that fingerprint)

Instructions for anchoring


Note : - Anchor bolt should be fitted floor BEFORE safe is bolted down.
- Bolt may need to be cut.
- A cover is given for preventing the inflow of foreign substance.
Place cover over hole.

1. The size of anchor bolt is as fellows.

A(Anchor size)	3/8" X 4"(M10 X 101L)
B(Diameter of hole)	9/16" (∅14)

2. After checking the anchor bolt size 'A', drill a hole with 'B' size in concrete to a depth of 2 inches(50mm)
3. Insert anchor bolt & pipe into hole.
4. Place flat washer & nut on anchor bolt and tighten (14mm wrench) to allow anchor pipe to expand and secure into floor.
5. Remove nut & washer from anchor bolt.
6. Please safe on top of anchoring bolt through center hole in bottom of safe.
7. Place anchor cap, flat washer, lock washer & nut on anchor bolt and tighten.

Instructions for anchoring

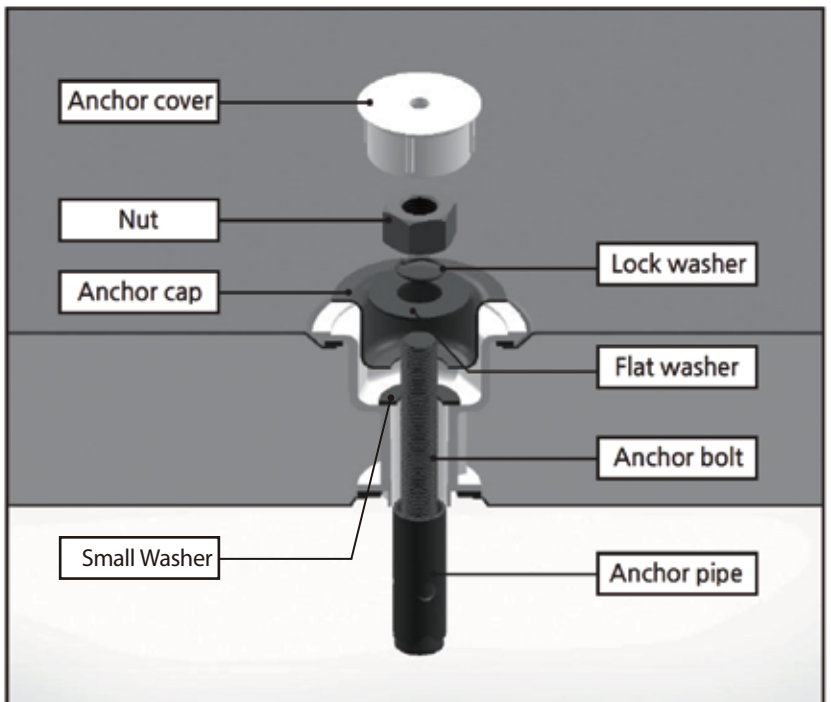

TROUBLE-SHOOTING

Situation	Possible Cause	Measures
No response when START button pressed	·Battery discharge ·Incorrect insertion of batteries ·Keypad Lock mode ON · Circuit error	·Replace batteries with new ones. ·Confirm correct insertion of batteries. ·Press START for 3 seconds to deactivate Keypad Lock mode. ·Contact store where safe was purchased.
Alarm continues ringing and safe does not work	·5 times wrong passcode input	·Enter correct passcode or wait for 3 minutes until alarm stops.
“Err-03(CH-03)” message appears	·Incorrect passcode	·Enter correct passcode.
Cannot change passcode	·Exceed time limit when changes passcode ·Keypad malfunction ·Button error	·Enter passcode within 5 seconds. ·Contact store where safe was purchased.
“Lo_bAt” message appears	·Low battery	·Replace batteries with new ones.
“Act” message appears	·Keypad Lock mode ON	·Press START button for 3 seconds to deactivate Keypad Lock mode
Forgot passcode		·Use the Mechanical Override Key