
USER MANUAL

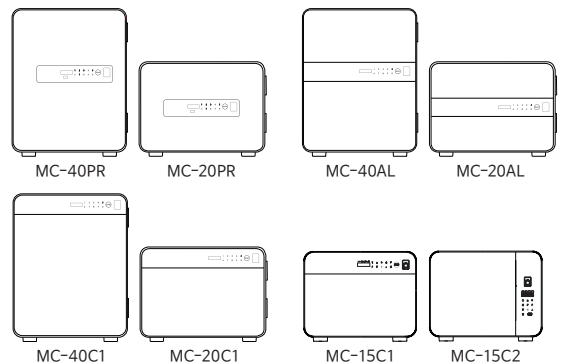

KOREA CERTIFICATION
KOREA STANDARD
SWEDEN
ISO9001
ISO14001

Safety Precautions

- Finger or objects may get stuck when opening and closing door.
- Keep away from children.
- Do not hit edge of safe to avoid injury.


- Be careful when moving or installing safe to avoid any injury.
- Firmly fix safe to ground when installing. When moving safe, inquire a professional if needed.
- Improper handling of safe can cause damage to floor or table.

- Avoid placing fragile objects, such as ceramic or glass, on safe. They may fall and cause injury.

- Place safe on dry flat surface. Safe door may not close.

ver.202601


Safe overview

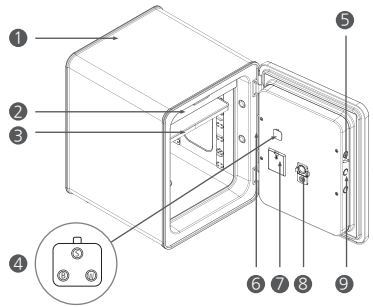


01 Main body
02 Tray
03 Shelf(MC-40 only)
04 "S" Memory Button
"B"(Not in use)
"W"(Not in use)
05 Door sensor
06 LED Light
07 Battery case
08 Alarm
09 Lock Bolt

Keypad Overview

· MC-20/40PR

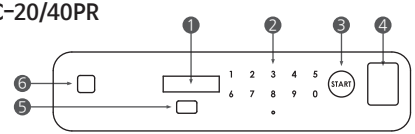

· MC-20/40AL, MC-20/40C1

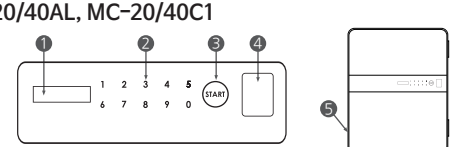

01 LCD Display
02 Touch Keypad
03 Touch START Button
04 Fingerprint lock
05 USB C type port
06 Master Key Hole(option)

OPEN

Press STRAT → Enter passcode (initial code:123456) → Press STRAT → Pull the door

PASSCODE CHANGE

[2 User mode]

Open the door → Press "S" button on the backside of the door → "CodE" will be displayed. And then 'USEr_' will be displayed → User 1 Ⓐ / User 2 Ⓑ

A : User 1


Press '1', then press START button → Enter new passcode (4~20digit). Then press START button → "AgAin", then '_____' will be displayed → Enter new passcode again, then press START button. → "USEr_1" will be displayed. New passcode was set

B : User 2

Press '2', then press START button → Enter new passcode (4~20digit). Then press START button → "AgAin", then '_____' will be displayed → Enter new passcode again, then press START button. → "USEr_2" will be displayed. New passcode was set

[1 User mode]

Open the door → Press "S", button on the backside of the door → "CodE" will be displayed → Enter new passcode (4~20digit). Then press START button → "AgAin", then '_____' will be displayed → Enter new passcode again, then press START button. → "USEr_1" will be displayed. New passcode was set

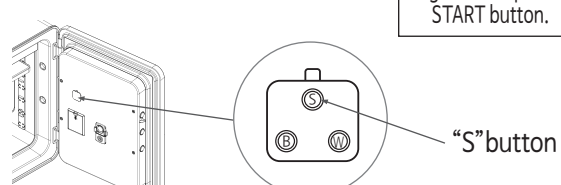

REGISTER FINGERPRINT

Open the door → Press 'S' button on the backside of the door for 3 seconds → 'SEt' will be displayed → Press 'S' button again shortly → 'FIngEr' will be displayed → Press '0' to register fingerprint → Scan fingerprint 3 times

(Maximum 10 fingerprint registerable)

DELETE FINGERPRINT

Open the door → Press 'S' button on the backside of the door for 3 seconds → 'SEt' will be displayed → Press 'S' button once again shortly → 'FIngEr' will be displayed → Press '1' to delete fingerprint → Enter ID number of fingerprint to delete

(Press 'S' button to delete all fingerprint at once)

REPLACING BATTERIES

Replace batteries immediately when

- screen displays "Lo_bAt."
- safe door fails to open when "OPEn" message appears after passcode is entered.
- "good" appears on display along with "beep beep" sound after passcode is entered.
- screen fails to turn on after you press START button.
- touch button is not clear enough
- there is no response or malfunction


⚠ Attention

- After battery replacement, confirm safe is properly working before closing door.
- Use 1.5V alkaline batteries(AA X4).

  *** Please make sure to use a new battery when replacing the battery.**
  Battery leakage problems may occur when replaced with used batteries.
  If you do not use the safe for a long time, you may experience battery leakage problems, so keep the battery removed.
- Proper insertion of the batteries is confirmed once screen displays "good" message and beep is heard.

MICRO USB 'C' TYPE PORT


In case the internal batteries are used up, Micro USB C Type port can be used to open the door

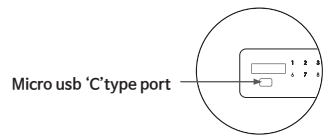

HOW TO USE ALARM

1. Use the "ON/OFF" switch on the Alarm to control the Alarm.
2. Use 3 x 1.5V AAA batteries.

-When there is external impact or the safe is tilted, the alarm fires (120dB sound)
-After 10 seconds from turning on the switch, Alarm is ready to operate.
-There is light detecting sensor with the alarm, so it will be off when the door is open.

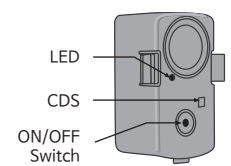

KEYPAD LOCK MODE

1. Activate

Press START for more than 10 seconds untill "Act" appears.
"Act" message signifies activation of keypad lock mode.
Any keypad input will only display "ACT"



2. Deactivate

To deactivate keypad lock mode, press START
for more than 3 seconds untill "dEAct" appears.



SECURITY MODE

Press START button twice to hide passcode display.

To disable the function, press START button twice again.



[Passcode displayed]



[Passcode not displayed]

VOLUME CONTROL

Open the door ▶ Press “S” button on the backside of the door for 3 seconds ▶ “SEt” will be displayed ▶ Press “S” button again twice shortly ▶ “VoL” will be displayed ▶ Press “0” ~“7” to choose volume ▶ Press STRAT



[Volume displayed]

REMOVING PATTERN PROTECTIVE VINYL(MC-15)

In the case of MC-15 removable pattern specification, the pattern may fall off while removing the pattern protective vinyl, but it can be easily reassembled.

TROUBLE-SHOOTING

Situation	Possible Cause	Measures
No response when START button pressed	·Battery discharge ·Incorrect insertion of batteries ·Keypad Lock mode ON · Circuit error	·Replace batteries with new ones. ·Confirm correct insertion of batteries. ·Press START for 3 seconds to deactivate Keypad Lock mode. ·Contact store where safe was purchased.
Alarm continues ringing and safe does not work	·5 times wrong passcode input	·Enter correct passcode or wait for 3 minutes until alarm stops.
“CH-03(Err-03)” message appears	·Incorrect passcode	·Enter correct passcode.
Cannot change passcode	·Exceed time limit when changes passcode ·Keypad malfunction ·Button error	·Enter passcode within 5 seconds. ·Contact store where safe was purchased.
“Lo_bAt” message appears	·Low battery	·Replace batteries with new ones.
“Act” message appears	·Keypad Lock mode ON	·Press START button for 3 seconds to deactivate Keypad Lock mode
Forgot passcode		·Contact store where safe was purchased.