Anchoring Instructions (Only for safes with pre-drilled anchor holes.)


Notice : Anchor bolt must be inserted into floor BEFORE safe is bolted down.

1. Anchor bolts vary according to model. After checking anchor bolt size, drill a hole to a depth of 2 inches (50mm). Refer to chart for appropriate hole size.

A(Anchor size)	B(Diameter of hole)
1/4" (M6×50)	Ø10(5/16")
3/8" (M10×101mm)	Ø14(9/16")
3/8" (M10×152mm)	Ø14(9/16")

2. Insert anchor bolt and pipe into hole.
3. Place flat washer and nut on anchor bolt. Tighten with 14mm wrench to allow anchor bolt to expand and secure into floor.
4. Remove nut and washer from anchor bolt.
5. Place safe on top of anchoring bolt through center hole on bottom of safe.
6. Place washer, lock washer, and nut on anchor bolt. Tighten.

Notice : 1. Bolt may need to be cut.
2. Place cover hole for fire resistance.

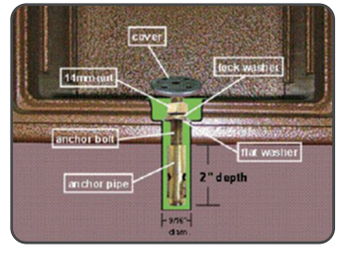

USER MANUAL

MTC-1000/2000/2150
MTA-1000/2000/2150


MTC-1000/2000/2150


MTA-1000/2000/2150

Safety Precautions

Safety precautions are to prevent any unexpected risk or damage.
Please read before use.

- · Be careful when opening and closing door. Finger or objects may get stuck.
- · Keep away from children.
- · Do not hit edge of safe to avoid injury.

- · Safe is heavy. be careful when moving or installing safe to avoid any injury.
- · Firmly fix safe to ground when installing. When moving safe, inquire a professional if needed.
- · Improper handling of safe can cause damage to floor or table.

- · Avoid placing fragile objects, such as ceramic or glass, on safe. They may fall and cause injury.

- · Place safe on flat surface. Otherwise, safe door may not close.

Contents

Before using the safe

Safty Precautions 01

Before Use 02

How to use the safe

Component / Keypad overview 03

Inside Overview / Opening Door / Changing Passcode 04

Resistering & Deleting Fingerprint / Using Alarm 05

Trouble Shooting 06

Convenient Functions & Anchoring the safe

Keypad Lock Mode / Security Mode / Volume Control 07

Anchoring kit instruction 08

Before Use

- Product may malfunction if any foreign metal substances or moisture enter keypad.
- Do not scratch keypad with any sharp material.
- Do not apply excessive force to keypad.
- Avoid exposure to any chemicals (gasoline, benzene, solvent, acetone, thinner, etc.)
- Avoid direct fire or heat.
- Remove batteries when safe is not used for long time.
- Excessive force to safe handle may cause breakage.
- Safe can be broken into by using cutting or welding tools. Our company is not liable for any stolen items.

Keypad Lock Mode

Activate

Press START for more than 10 seconds until “Act” appears. “Act” message signifies activation of keypad lock mode. Any keypad input will only display “Act.”



Deactivate

To deactivate keypad lock mode, press “START” buton for more than 3 seconds until “dEAct” appears.



⚠ **Notice!!** Keypad lock mode will remain despite removal of batteries.

Security Mode

Press “START” button twice to hide passcode display.



Passcode displayed



Passcode not displayed

Volume Control

1. Open the door.
2. Press “S” button on the backside of the door for 3 seconds.
3. “SEt” will be displayed.
4. Press “S” button again shortly 2 times.
5. “Vol” will be displayed.
6. Press “0”~“4” to choose volume.
7. Press “START” button.

Trouble-shooting


Situation	Possible Cause	Measures
No response when START button pressed	• Dead battery	• Replace new batteries
	• Incorrect insertion of batteries	• Confirm correct insertion of batteries
	• Keypad lock mode ON	• Press START for 3 seconds to deactivate keypad lock mode
	• Circuit error	• Contact store where safe was purchased
Alarm continues ringing and safe does not work	• 5 times wrong password input	• Enter correct password or wait 3 minutes until automatic alarm stops
"CH-03 (Err-03)" message appears	• Incorrect password	• Enter correct password
Cannot change password	• Exceeded time limit during password change	• Enter password in under 5 seconds
	• Keypad malfunction	• Contact store where safe was purchased
	• Button error	• Contact store where safe was purchased
"Lo_bAt" message appears	• Low battery	• Replace new batteries
"Act" message appears	• Keypad lock mode ON	• Press START for 3 seconds to deactivate keypad lock mode
Forgot password		• Contact store where safe was purchased


Component



User Manual | Drawer | Shelf | Alarm | Alkaline Batterty | Key& Card Holder | Emergency Battery Pack

Keypad Overview

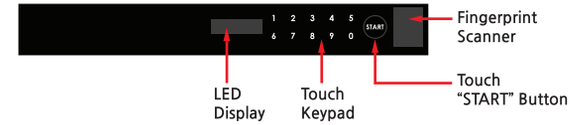

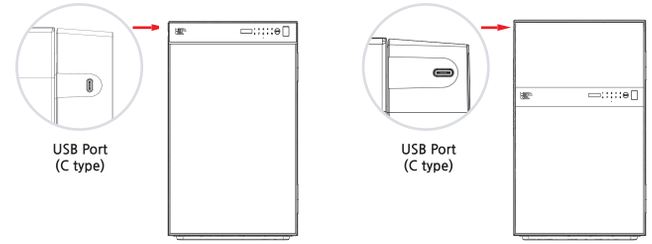


MTC-1000/2000/2150 | MTA-1000/2000/2150

External battery pack

1.External battery pack can be used in case the door cannot be open because of low battery.
2. The node is at the left side of the door.
3. Original battery pack is recommended.
4. The out should less than 10Watt. (5v 2A)
5. High speed charger cannot be used. (ex: USB-PD, PPS)
6. Problems caused by unauthorized battery pack will not be covered.

Inside Overview

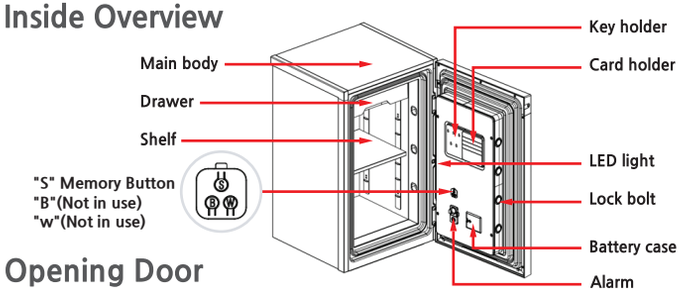

Opening Door

1. Press “START” button.
2. Enter passcode.
3. Press “START” button.
5. Pull the door.

- Press “START” button to cancel passcode entry.
- Safe must be opened within 3~4 seconds.
- “Err-03” indicates incorrect passcode.
- 5 consecutive incorrect passcode will sound alarm for 3 minutes. Press “START” button and enter correct passcode to stop alarm.

Changing Passcode

2 User mode

1. Open the door.
2. Press “S” button on the backside of the door.
3. “CodE” will be displayed. And then “USEr_” will be displayed.
4. Press “1” (or “2”), then press “START” button.
5. Enter new passcode(4~20 digit). Then press “START” button.
6. AgAin”, then “_____” will be displayed.
7. Enter new passcode again, then Press “START” button.
8. “USEr_1” (or “USEr_2”) will be displayed. New passcode was set.

1 User mode

1. Open the door.
2. Press “S” button on the backside of the door.
3. “CodE” will be displayed.
4. Enter new passcode(4~20 digit).
5. Enter new passcode again.
6. Press “START” button.

Registering and Deleting Fingerprint

Registerting Fingerprint


1. Open the door.
2. Press “S” button on the backside of the door for 3 seconds.
3. “SEt” will be displayed.
4. Press “S” button again shortly.
5. “FingEr’ will be displayed.
6. Press ”0” to resister fingerprint.
7. Scan fingerprint 2 times. (Maximum 10 fingerprints resisterable.)

Deleting Fingerprint

1. Open the door.
2. Press “S” button on the backside of the door for 3 seconds.
3. “SEt” will be displayed.
4. Press “S” button again shortly.
5. “FingEr’ will be displayed.
6. Press ”1” to delete fingerprint.
7. Enter number of fingerprint to delete.
   (Press “S” to delete all fingerprints at once.)

Using Alarm

1. Use the “ON/OFF’ switch on the Alarm to control the Alartm.
2. Use 1.5V AAA batteries.

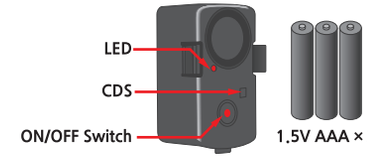

- When there is external impact or the safe is tilted, the alarm fires (120dB sound).
- After 10 seconds from turning on the switch, Alarm is ready to operate.
- There is light detecting sensor with the alarm, so it will be off when the door is open.